

DualControl Brake System

For the R 1300 GS

INSTALLATION & CARE INSTRUCTIONS



Dear Rider,

Thank you for choosing AltRider! Whether a seasoned world adventurer or a first time ADV-Newbie, we welcome you to the AltRider experience. You can install your new product with the utmost confidence. AltRider designs, tests, and manufactures all of its products here in the United States. We are proud to do what we do, and honored to present to you the product of our labors.


Enjoy it, show it off, and most of all, RIDE IT!

Venture On,
Jeremy LeBreton

ALTRIDER
venture on


Enlarger

- ① Enlarger (Top)
- ② Enlarger (Bottom)
- ③ (8) Set Screws
- ④ (4) M5 Flat Head Screws

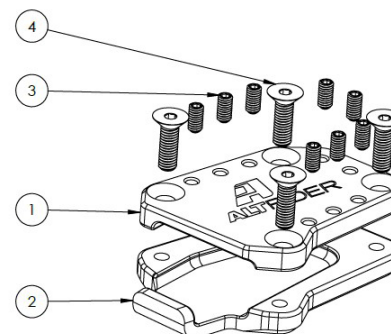

Riser

- ⑤ (2) M5 Socket Head Screws
- ⑥ (3) Set Screws
- ⑦ Riser

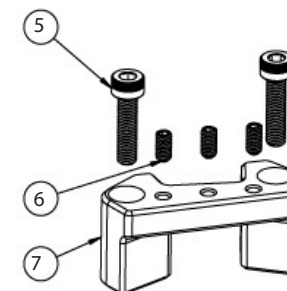

Tools necessary:

- ① 4 mm Allen hex tool
- ② 3 mm Allen hex tool


- ③ 2 mm Allen hex tool
- ④ Thread locker (medium strength)



④



①

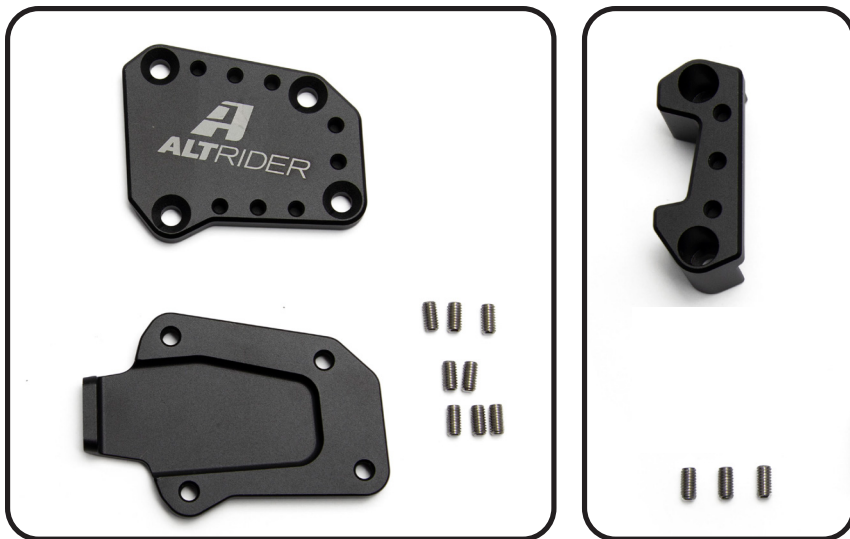

Install M4 x 8mm Grip pins, using 2mm Allen driver. Use a small dot of thread locker on each pin. Total number and placement is up to you. Tighten snug, but be careful not to strip the tool.


②



DualControl only compatible **standard**
BMW R 1300 GS brake pedal

NOTE: The AltRider DualControl is only compatible with the standard brake pedal shown here.

③

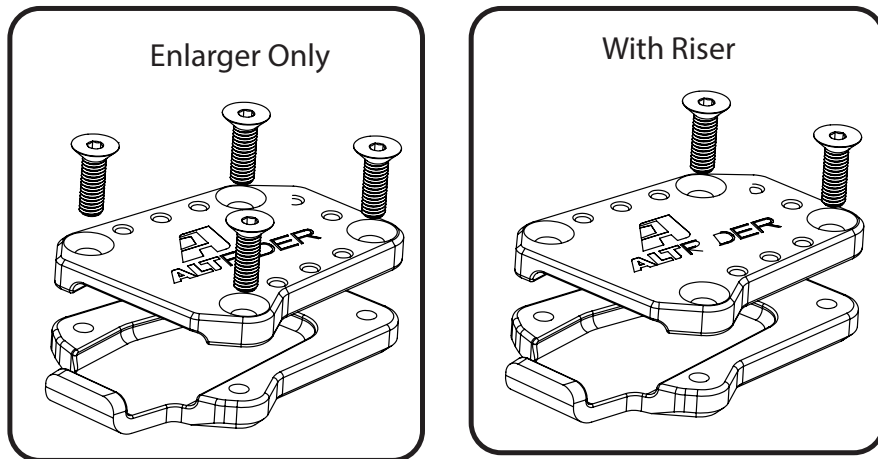

Place the bottom plate underneath the pedal - the pedal should fit snugly into place.

ENLARGER ONLY: Apply threadlock to all 4 M5 flathead screws and tighten them to 3nm (2.5 ft-lb) using a 3 mm allen hex key

WITH THE RISER: Apply threadlock to only two of the M5 flathead screws, the should be placed in the holes furthest from the pedal. Tighten them to 3nm (2.5 ft-lb) using a 3 mm allen hex key

④



IF YOU HAVE THE RISER: Place the riser over the 2 holes closest to the pedal in the orientation shown above, with the set screws facing outside the bike. Using the 2 M5 socket head caps screws apply threadlock and secure the riser, top plate, and bottom plate together and tighten to 6NM (5ft-lb)

CONGRATULATIONS!

You've completed your installation. If at any point you have questions about your installation or have any feed back for us, we'd love to hear it. A downloadable version of these instructions can be found at our website. www.AltRider.com

Global Office:

email: info@altrider.com
phone: +1 206-922-3618
address: 3708 Airport Way South
Seattle, WA 98134

Europe Office:

email: info@altrider.eu
address: Spectrumlaan 31
2665 NM Bleiswijk
Netherlands



youtube.com/altriderllc



facebook.com/altrider



[@altriderllc](https://twitter.com/altriderllc)



[@altrider_official](https://www.instagram.com/altrider_official)

TERMS OF USE, WARRANTY AND LIABILITY WAIVER

AltRider LLC, a Washington company, having its principal place of business in Seattle, WA ("AltRider") offers its motorcycle accessories (the "Product") with the terms, conditions and notices as follows:

Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions, and notices contained herein. Installation and/or use of this product implies acceptance of all such terms, conditions, and notices. If you do not agree to these terms, do not buy the Product. If you have already bought the Product and do not agree to these terms, return this Product promptly including the packaging and all written materials, to AltRider.

Limitation of Liability and Warranty Disclaimer

You may return your merchandise for a full refund or exchange, less any original or return shipping fees under these conditions:

1. Only if the merchandise is in 100% factory condition. Original manufacturer's packaging and same condition as sold – original boxes, packaging material, instructions, documentation, parts, and attached tags.
2. Only unused, unscratched, uninstalled, undamaged merchandise will be accepted. Do not install equipment until you are sure you want to keep it. Package items carefully in protective materials before returning them. Never ship an item in its original manufacturer's packaging – it will arrive damaged. Please use a postal box or other adequate packaging to ensure your return or exchange is not damaged on the way back to AltRider.com.

To read more about our exchanges and returns policy, on the web, navigate to www.altrider.com/index.php/symfony/exchangesAndReturns

Excepting the warranties stated in the preceding paragraph, AltRider hereby disclaims all other warranties and conditions with regard to the Product including all implied warranties and conditions of merchantability and fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof. AltRider does not warrant against damages or defects arising out of use or installation of the Product. Installation instructions are provided for your convenience. AltRider is not responsible for any damages arising out of the installation, improper or otherwise, of the Product. No warranty of any kind, expressed or implied, is made regarding the safety of this Product.

To the extent allowed by law, AltRider shall not be held liable for any direct, indirect, punitive, incidental, special or consequential damages arising out of, or connected with, the use or misuse of this Product. Buyer assumes all risks and liability arising from use of this Product.

Entire Agreement

This document states the entire obligation of AltRider with respect to the Product. If any part of this agreement is determined to be void, invalid, unenforceable or illegal, including, but not limited to the warranty disclaimers and liability limitations set forth above, then the remainder of the agreement shall remain in full force and effect.

Applicable Law

This agreement is governed by the laws of Washington, USA. You hereby consent to the exclusive jurisdiction and venue of the courts of Washington, USA, in all disputes arising out of or relating to the use of this product.